 


VIA

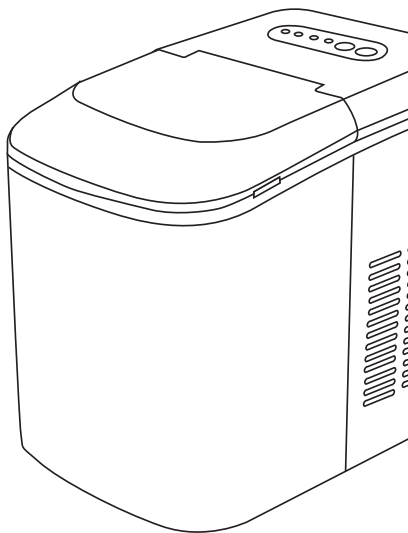

ICE MAKER

instruction manual
V12IMS15


12 MONTH WARRANTY

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	6
Operation Instructions	7
Troubleshooting	8
Care and Maintenance	10
Technical Specifications	11


Guide to the Appliance

 Ice Maker

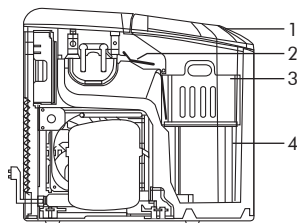

- | | |
|--------------------|--------------------|
| 1. Transparent lid | 3. Ice basket |
| 2. Ice shovel | 4. Water reservoir |

 Control Panel

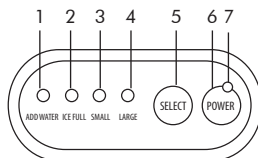

- | | |
|------------------------|--------------------|
| 1. ADD WATER Indicator | 5. SELECT Button |
| 2. ICE FULL Indicator | 6. POWER Button |
| 3. SMALL Indicator | 7. Power Indicator |
| 4. LARGE Indicator | |

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

 
- Read all the instructions carefully before using this appliance and keep them for future reference.
- Retain the manual. If you pass the appliance on to a third party, make sure to include this manual.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
- Unplug the appliance from the mains socket when not in use, or before cleaning any part of the appliance.
- Do not operate any appliance with a damaged mains cable or mains plug, or in an abnormal state. If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not use an extension cable, it may result in fire, electrical shock and/or personal injuries.
- Do not let the mains cable hang over the edge of the table or counter, or touch hot surfaces.
- Ensure that the plug is easily accessible to enable disconnection from the mains supply.
- To disconnect, remove the mains plug from the mains socket. Never pull the mains cable to remove the mains plug from mains socket.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the unit, unless they are of the type recommended by the manufacturer.
- Do not immerse the appliance, mains cable or mains plug in water or other liquids.
- Keep ventilation openings in the unit enclosure clear of obstructions.
- Do not store volatile or flammable substances, such as aerosol cans with a flammable propellant, in the unit.
- Stand the appliance on a stable flat surface before use.

- Choose a location for your unit away from heat sources such as radiators or fires.
- Only use the appliance for its intended domestic use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended for indoor household use and similar applications such as:
 - farm houses and by clients in hotels, motels and other residential type environment;
 - bed and breakfast type environment;
 - catering and similar non-retail applications.
- Children should be supervised to ensure that they do not play with the unit.
- **WARNING:** Fill with potable water only.


Items in the Box

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

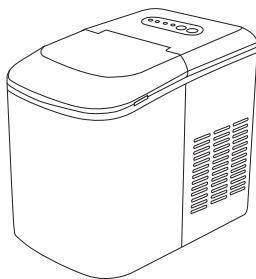

Main Unit

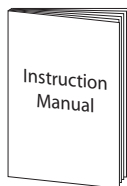 

Instruction Manual

Operation Instructions

1. Open the transparent lid and take out the ice basket. Pour potable water into the water reservoir. Put back the ice basket. Close the transparent lid.

WARNING. The water poured into the water reservoir should be lower than the water reservoir's MAX position.

2. Connect the mains plug. The Power indicator will flash. The unit is now in standby mode.
3. Press the SELECT button to select the desired ice size. You can select either small (indicator will light up) or large (indicator will light up) ice size. The default size is large.
4. Press the POWER button to start. You can press the POWER button during operation to return the unit to standby mode.

NOTE.

- For the first three cycles, the ice may be small and irregular in size. This may be due to warm water or ambient temperature. Use cool water (15°C-20°C) and operate the unit in an ambient temperature below 25°C.
- When the ice basket is full, remove the ice immediately. Do not allow the ice basket to overflow.
- When the ADD WATER indicator lights up in red, it means there is insufficient water in the water reservoir. You need to add enough water and then press the POWER button to restart.
- When the ICE FULL indicator flashes, it means the ice basket has reached the maximum storage capacity. Ice will stop being produced, the machine will automatically restart when the ice has been removed.

Troubleshooting

- If you experience a problem with your appliance, check in the following table for a solution to help you solve the problem. If after these checks the issue has not been solved, contact Viali customer care for advice.
- If power failure occurs during an ice making cycle, small ice chips may form and lodge in the ice shovel causing it to jam. If this occurs, the ice chips may be removed by disconnecting the power cord and gently pushing the ice shovel to the rear of the cabinet and removing the ice chips. When the ice shovel cannot remove the ice to the ice basket, push the ice shovel gently.

Problem	Possible Cause	Solution
The compressor works abnormally with a buzzing sound.	The voltage is lower than recommended.	Stop the unit and do not restart until the voltage is normal.
ADD WATER indicator lights up.	<ul style="list-style-type: none">• There is no water.• The pump is full of air.	<ul style="list-style-type: none">• Add some water until it reaches MAX position.• Press the POWER button to restart.
Indicator lights on the display are not on.	Blown fuse / No power	Replace fuse / Turn power on
The ice made is too large and with pieces sticking together.	<ul style="list-style-type: none">• Water temperature is too low.• Ice of previous cycles are left in the water tray.	<ul style="list-style-type: none">• Select small size.• Take out the ice in standby mode.

Troubleshooting

Problem	Possible Cause	Solution
All indicators flash simultaneously.	Water tray is blocked by ice cubes.	Unplug the power to take out the ice blocking the water tray, then plug the power and press the POWER button. The unit will restart 3 minutes later.
The ice may be small and irregular in size.	This may be due to warm water or ambient temperature.	Use cool water (15°C-20°C) and operate the unit in an ambient temperature below 25°C.

Care and Maintenance

- Before cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the unit. Do not spray with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before use.
- To ensure cleanness of ice, change the water in the water reservoir at least once a day. If not using for a long time, drain all the water and clean the unit.

Technical Specifications

Ice Sizes: Small, Large

Ice Storage Capacity: 600g

Refrigerant: R134a

Water Reservoir Capacity: 2.1L

Voltage: 220-240V~

Frequency : 50Hz

Power Consumption : 120W



E2284

Features and specifications are subject to change without prior notice.



Distributed by:

M.E.W. (Australia) Pty Ltd,
15 Vaughan St, Essendon Fields, VIC 3041

ACN 152 719 036

Made in China

Customer care: Aus-1300 650 966

customer care@vialiproducts.com.au

VIALIPRODUCTS.COM.AU

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

IB-V12IMS15-150910V1