 


VIA

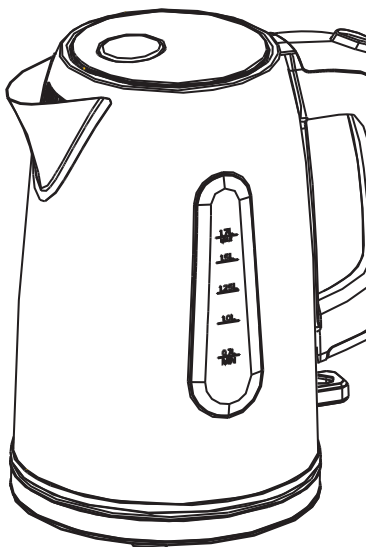

KETTLE

instruction manual

V17LKW15

V17LKR15

V17LKC15


V17LKK15

12 MONTH WARRANTY

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	8
Operation Instructions	9
Care and Maintenance	11
Technical Specifications	13

 Guide to the Appliance

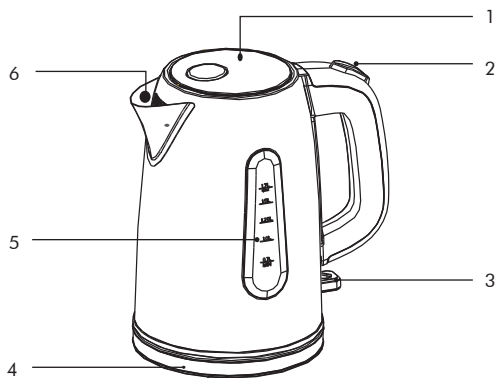

- | | |
|--------------------|---|
| 1. Lid | 4. Kettle Stand (mains cable at the bottom) |
| 2. Open Lid Button | 5. Water Fill Level |
| 3. POWER Switch | 6. Spout |

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all the instructions carefully before using this appliance and keep them for future reference.
- Retain the manual. If you pass the appliance on to a third party, make sure to include this manual.
- Unplug the appliance from the mains socket when not in use, or before cleaning any part of the appliance.
- Allow the appliance to completely cool down before cleaning.
- The appliance must not be immersed.
- Never place the appliance on or near sources of heat such as a cooker ring or gas flame.
- Always place the appliance on a dry, flat and stable surface.
- Avoid contact with the steam from the appliance's spout. Take care when pouring or refilling after boiling.

Safety Information and Warnings

- To prevent boiling dry, do not fill the appliance with water less than the minimum fill level as indicated on the appliance.
- Use the appliance to heat only water.
- Do not interfere with the normal working of the switch.
- Always keep the appliance out of the reach of small children. Children should be taught about the dangers of boiling water.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Safety Information and Warnings

- Do not let the mains cable overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- **WARNING:** Potential injury from misuse.
- The heating element surface is subject to residual heat after use.
- **WARNING:** Avoid spillage on the connector.
- **CAUTION:** Do not operate the kettle on an inclined plane.
- **CAUTION:** Do not move the kettle while it is switched on.
- This appliance is intended for indoor household use and similar applications such as:
 - farm houses and by clients in hotels, motels and other residential type environment;
 - bed and breakfast type environment;
 - catering and similar non-retail applications.

Safety Information and Warnings

- If kettle is overfilled, boiling water may be ejected.
- The appliance is only to be used with the stand provided.
- CAUTION: Do not operate the kettle unless the element is fully immersed.
- Fully uncoil power cord before use.


Items in the Box

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:



Main Unit

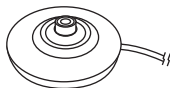

Kettle Stand

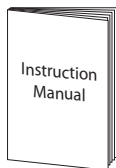

Instruction Manual

Operation Instructions


First Time Use

Clean your kettle by boiling a full kettle of water twice and then discarding the water.

Using the Mains Cable

The mains cable is stored at the bottom of the kettle stand.

1. Unwind the mains cable from the bottom of the kettle stand.
2. Extend the mains cable to the required length.
3. Insert the mains cable in the slot of the stand. For safety it is recommended that the length of exposed mains cable is kept as short as possible.

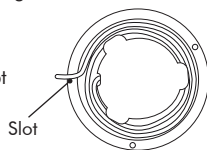

WARNING.

The kettle must only be used with the stand provided.

Filling the Kettle

1. Grip the handle and press the Open Lid button to open the lid.
2. Fill the kettle with the required amount of water. Do not exceed the maximum fill level (MAX 1.7L) as indicated on the Water Fill Level. Always ensure the kettle is filled past the MIN (0.7L) as indicated on the Water Fill Level.


WARNING.

- If the kettle is overfilled, boiling water may be ejected from the spout and cause scalding.
- If water level is too low (below the MIN level), the kettle will automatically switch off.


Operation Instructions

Boiling Water

1. Place the kettle on its stand. Connect the stand's mains cable to the mains socket.

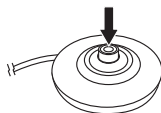


2. Push the POWER switch down to start boiling. The light will illuminate.

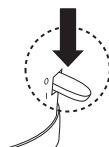

WARNING.

- Place the kettle and kettle stand on a firm, stable and dry work surface.
 - Never open the lid while the water is boiling. The steam coming out from the kettle is very hot.
3. When the water has boiled, the kettle will automatically switch off and the POWER switch will return to the upward position. Alternatively, you can also manually push the POWER switch up to switch off the kettle.

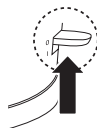

WARNING.


- Ensure that the POWER switch is not obstructed and the lid is firmly closed. The kettle will not turn off if the POWER switch is obstructed or if the lid is open.
- After removing the kettle, there may be some water on the surface of the stand. This is condensation from the steam after boiling. This is normal and should not be a cause for alarm.

Care and Maintenance

Cleaning the Kettle

The kettle exterior should be cleaned with a soft damp cloth. Do not use abrasive cleaners or scouring pads which may damage the finish of the kettle.

Never immerse the kettle or the stand in water and always keep the electrical contacts and the power connector hole dry. Always disconnect from the mains before cleaning the stand. After cleaning, wind the mains cable back at the bottom of the kettle stand.

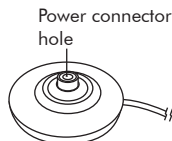

WARNING.

Do not insert any foreign objects or allow any liquid to spill into the power connector hole.

Descaling the Kettle

Depending on the hardness of the water in your area, limescale may be deposited on the heating element and the inside of the kettle. This normal build-up is not harmful to health but an excessive amount of limescale may affect the performance of the kettle.

To descale, fill the kettle with distilled water up to three-quarters of the MAX level and bring the water to boil. After the kettle has switched off, add a descaling solution. Never attempt to descale the kettle by chipping or scraping with a sharp implement.

Care and Maintenance

Cleaning the Filter

To prevent loose particles of limescale from being poured into your beverage, your kettle is fitted with a filter. You may remove the filter and fit it back in after cleaning.

1. To remove the filter, open the lid.
2. Grip the filter's lip firmly and pull upwards.
3. Wash the filter under running water.
4. Slot the filter back into the grooves inside the spout.
5. Push (gently) into place.



WARNING.

Ensure the kettle is cool before removing the filter.

Technical Specifications

Power Supply: 220-240V~ 50Hz

Power Consumption: 1850-2200W



E2284

Features and specifications are subject to change without prior notice.



Distributed by:

M.E.W. (Australia) Pty Ltd,
15 Vaughan St, Essendon Fields, VIC 3041
ACN 152 719 036
Made in China
Customer care: Aus-1300 650 966
customer care@vialiproducts.com.au
VIALIPRODUCTS.COM.AU

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

IB-V17LKW_R_C_K15-150907V1