 


VIA

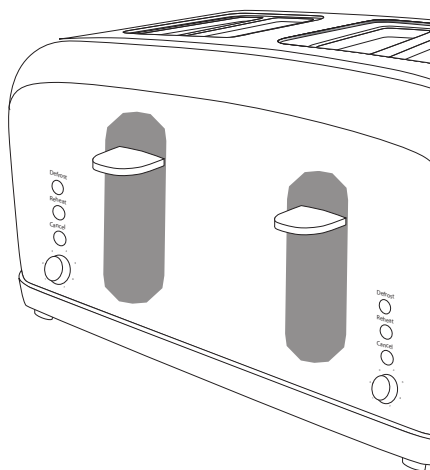

TOASTER

instruction manual

V4STW15

V4STR15

V4STC15


V4STK15

12 MONTH WARRANTY

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	7
Operation Instructions	8
Advanced Features	10
Hints and Tips	11
Care and Maintenance	12
Technical Specifications	13

 Guide to the Appliance

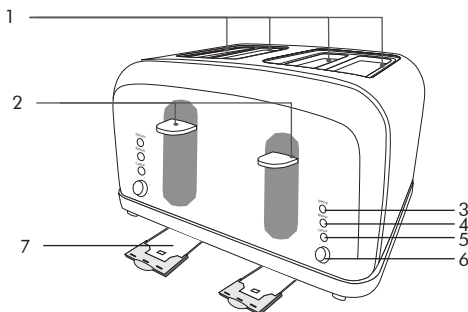

- | | |
|-------------------|---------------------|
| 1. Toasting slot | 5. CANCEL button |
| 2. Toasting lever | 6. Browning control |
| 3. DEFROST button | 7. Crumb tray |
| 4. REHEAT button | |

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings



CAUTION : HOT SURFACE

Do not touch the surface of the appliance during operation.

For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.

- Read all the instructions carefully before using this appliance and keep them for future reference.
- Retain the manual. If you pass the appliance on to a third party, make sure to include this manual.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
- Please inspect the appliance for damage after unpacking.
- Do not continue to operate the appliance if you are in any doubt about it working normally, or if it is damaged in any way - switch off, unplug the toaster from the mains and consult your dealer.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Avoid extreme degrees of temperature, either hot or cold. Place the appliance well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Do not touch hot surfaces. Temperature of accessible surfaces may be very high when the appliance is operating. Let the appliance cool down completely before touching it. Keep children away.

Safety Information and Warnings

- Never place any type of candle or naked flame on the top of or near the appliance.
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this appliance in a bookcase, built-in cabinet or in another confined space. Ensure the appliance is well ventilated.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Always disconnect the appliance from the mains supply before moving the appliance.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the appliance unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Disconnect the mains plug from the mains socket.
- Bread may burn. Your appliance must not be used near or below curtains or other combustible materials. It must be watched when in use.
- Only toast bread in your appliance. Do not attempt to toast any pastry or bread product which is filled with a fruit or sugary filling (pop tarts etc). The stuffing may leak from the pastry or bread pocket and damage your appliance with the possible risk of a fire occurring.
- Oversize food, metal foil packages or utensils must not be inserted in the appliance as they may cause fire or electric shock.
- Do not attempt to dislodge food while the appliance is in use.
- Take the bread out carefully after toasting to avoid injuries.
- Do not use the appliance for anything other than its intended use.
- Make sure the appliance is not resting on top of the supply cord, as the weight of the appliance may damage the supply cord and create a safety hazard.
- Do not let the supply cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- Fully uncoil the power cord before use.

 
Safety Information and Warnings

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case – this could result in a fatal electric shock.
- To reduce the risk of electric shock, do not remove screws. The appliance does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.
- Ensure the appliance is unplugged before cleaning.
- Allow the appliance to cool completely before cleaning or storing.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the appliance's surface.
- Do not use liquids to clean the appliance.
- To reduce the risk of fire, electric shock or product damage, do not expose this appliance to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the appliance.
- If you spill any liquid into the appliance, it can cause serious damage. Switch it off at the mains immediately and unplug it.
- Do not immerse in any liquid.


Items in the Box

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

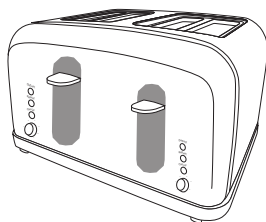

Main Unit

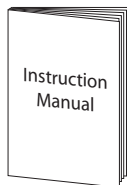 

Instruction Manual

Operation Instructions

First Time Use

Please note there may be manufacturing residue or oil remaining in the toaster or heating element. Odour may be emitted the first time you use it. This is normal and will not occur after using your toaster for several times.

The first 2 times you use your toaster we suggest that you operate it without bread.

Toasting Bread

NOTE.

- To prevent jamming, do not use your toaster with torn slices of bread.
 - Make sure the size and thickness of the slices of bread fit easily into the toasting slots.
 - Make sure the crumb tray is positioned in place before using.
 - Always watch your toaster when in use. Never leave your toaster unattended.
1. Plug the mains plug into the mains socket.
 2. Remove all protective wrapping. Insert bread slices into the toasting slots. Avoid toasting bread with ingredients such as butter.

Operation Instructions

3. Select the level of browning by turning the **BROWNING CONTROL**. There are 7 setting levels: setting 1 is the lightest level of browning and setting 7 is the darkest level of browning.

NOTE.

- Select a lower position (i.e. 1 or 2) for light browning, especially for toasting only one slice or for dry (old) bread. Note that the toasting colour for one slice will be darker than that for two slices at the same browning level.
- If you have already toasted some bread, the heating element will be hot, so when you put some more bread into the toaster it may brown faster than the first slices that were toasted, even if the **BROWNING CONTROL** is set to the same level.

Lower down the toasting lever until it is positioned in place. The toaster will begin at once.



NOTE.

- Only when the toaster is connected to the mains power can the toasting lever be locked in the downward position.
 - During the toasting process, you may observe the toasting colour. Press the **CANCEL** button to cancel the operation at any time. Never lift the toasting lever to stop the operation.
4. Once the bread has been toasted to the preset browning level, it will automatically pop up and the toasting lever will automatically return to the upward position.

Advanced Features

Defrost

1. Insert the frozen bread into the toasting slots.
2. Set the BROWNING CONTROL to your desired colour.
3. Lower down the toasting lever until it remains in a downward position, then press the DEFROST button. The button will illuminate.

Reheat

1. Insert the cold slices of toast and lower down the toasting lever until it remains in a downward position. In Reheat mode, setting the BROWNING CONTROL will have no effect as the toasting time is fixed. When the toasting time runs out (reheating is completed), the bread will automatically pop up and the toasting lever will automatically return to the upward position.
2. Press the REHEAT button. The button will illuminate.

Cancel

During the toasting process, you can press the CANCEL button to stop the operation at any time. Never lift the toasting lever to stop operation.

Hints and Tips

Clearing a Piece of Jammed Bread

1. Remove the mains plug from the mains socket.
2. Allow the toaster to completely cool down.
3. Push and hold the toasting lever down then release.
4. Gently dislodge the jammed bread with a non-metallic object, for example the handle of a wooden spoon.

WARNING.

 
Make sure you do not touch the heating elements, as you may damage them.

Care and Maintenance

- Unplug the toaster from the mains socket and allow the toaster to cool down before cleaning.
- Do not use harsh cleaners or solvents as they may damage the casing.
- The body of the toaster should be cleaned using a cloth dampened with warm water and detergent. Make sure you do not allow water to seep into the controls or heating elements.

Removing Crumbs from the Toaster

1. Remove the mains plug from the mains socket.
2. Slide the crumb tray out. (Be careful that the metal part may be hot.)
3. Empty the crumbs into the bin and clean the crumb tray.

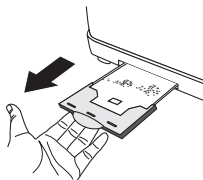

WARNING.

- Let the crumb tray dry thoroughly before re-inserting back into the toaster.
- Ensure the crumb tray is completely inserted before using your toaster again.

Technical Specifications

Power Supply: 220-240V~ 50Hz

Power Consumption: 1700-2000W



E2284

Features and specifications are subject to change without prior notice.



Distributed by:

M.E.W. (Australia) Pty Ltd,
15 Vaughan St, Essendon Fields, VIC 3041

ACN 152 719 036

Made in China

Customer care: Aus-1300 650 966

customer care@vialiproducts.com.au

VIALIPRODUCTS.COM.AU

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

IB-V4STW_R_C_K15-150923V1