


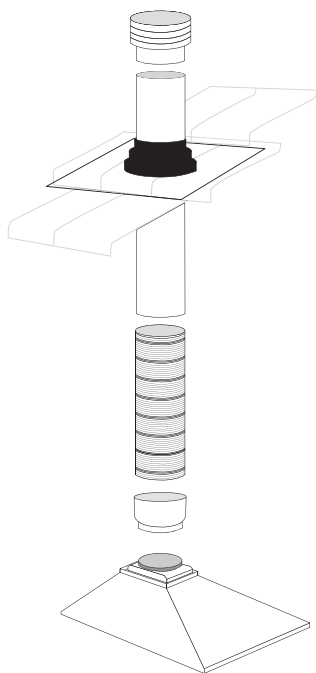

TILE ROOF DUCTING KIT

instruction manual
VDKRT


12 MONTH WARRANTY

Contents

Guide to the Ducting Kit	2
Caring for the Environment	3
Safety Information and Warnings	4 - 5
Items in the Box	6
Installation Instructions	7

Guide to the Ducting Kit

VDKRT

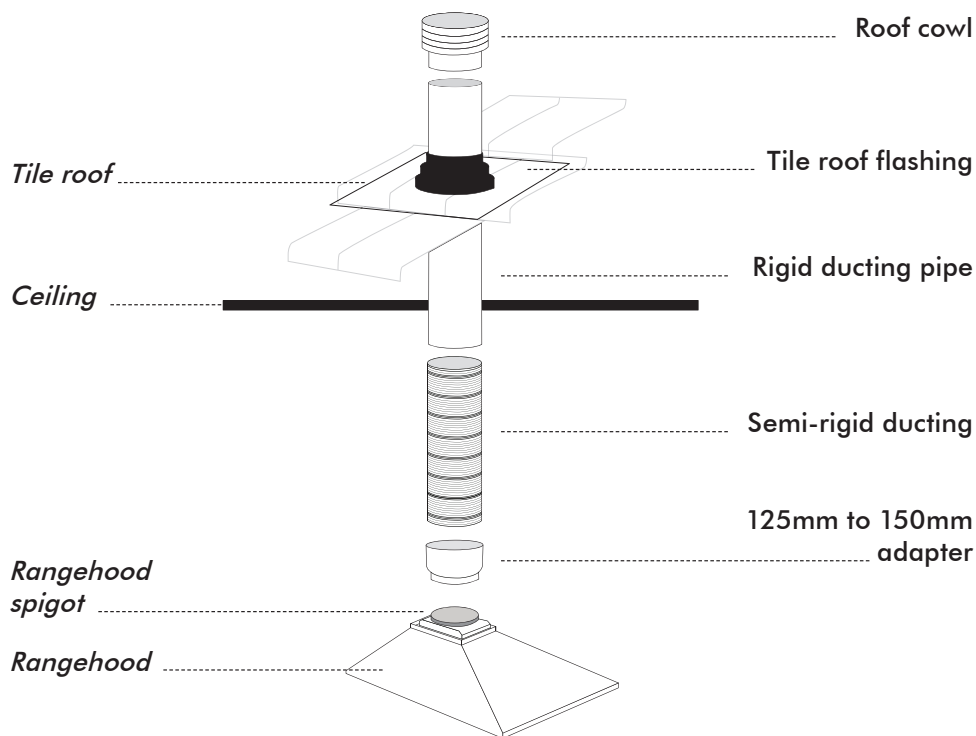

Note:

Due to production improvements, the ducting kit may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only

Caring for the Environment

Responsible disposal of the packaging

The packaging of your ducting kit has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Safety Information and Warnings

General

- Please ensure this manual is read carefully before installation and use. Keep this manual in a safe and accessible location should future reference be required.
- The ducting has been designed as an exhausting version (external exhaust) of your cooker hood.

Installation Safety Precautions

- Appropriate safety wear and shoes should be worn for installation.
- Safety harness equipment is recommended if working on a roof or a high ladder.
- Installation by a professional recommended.

WARNINGS

- Regular maintenance should be made to check the status of the filters of your cooker hood.
- Naked Flame cooking (flambe) is prohibited underneath cooker hood (e.g. items such as BBQ's).
- The ducting kit should only be installed in a domestic situation.
- Constantly check frying food to avoid it becoming overheated as the oil may become a fire hazard.
- Young children should be supervised to ensure that they do not play with the appliance.
- Avoid bends wherever possible along ducting. Efficiency will be reduced.
- Never decrease ducting size along ducting length.
- Avoid long runs of ducting.
- No joins should have gaps.


Items in the Box

1. 1 x 610mm / 150mm diameter, rigid ducting pipe
2. 1 x 3000mm / 150mm diameter, flexible semi rigid ducting pipe
3. 1 x waterproof roof cowl
4. 1 x tile roof flashing
5. 1 x 125mm to 150mm duct adapter where spigot size is 120mm in diameter
6. 1 x 178mm worm drive duct clamp - used to secure flashing to rigid ducting pipe
7. 1 x 165mm worm drive duct clamp - used to secure flexible semi-rigid ducting to rigid ducting pipe
8. 1 x galvanised metal strap - to secure rigid ducting pipe to roof struts or joists
9. 1 x 3.5mm diameter drill bit to drill holes for rivets to secure strap to rigid ducting pipe and roof cowl to rigid ducting pipe
10. 10 x 3.2mm rivets
11. 1 x 48mm wide ducting tape - to secure flexible semi-rigid ducting pipe to spigot and / or adapter

Installation Instructions

Tile Mount Installation:

1. Following installation of rangehood ensure correct positioning of the kit components, refer to above illustration. All kit components need to be installed securely to reduce noise levels and ensure optimum air flow. No gaps should be present that may effect flow of air through the ducting pipe. Holes made to house ducting pipe through ceiling should be sealed to stop dust or insects entering the house from the roof space above ceiling.
2. Rigid ducting pipe is secured to roof struts and or joists by means of the galvanised strap supplied. The strap is screwed to roof joists and or struts (screws not supplied) and secured to the ducting pipe with the rivets supplied. Drill holes in rigid ducting pipe with drill bit supplied and fix strap to pipe with rivets, then proceed to screw into available roof joists and or struts.
3. Tile roof flashing is fitted over the rigid ducting pipe. Rubber collar can be cut to match ducting size and must have a water tight seal against the pipe. Silicon not supplied, should be used at the top of the rubber collar to ensure it is correctly sealed against water penetration. Tile roof flashing can be moulded to fit all tile types and under tile edges in order to not restrict water flow over tiles during rainfall. Fit 178mm worm drive duct clamp over rubber collar and tighten to ensure a water tight seal against the rigid ducting pipe. Fit waterproof roof cowl to top of rigid ducting pipe by means of 4 rivets.
4. Extend semi-rigid ducting pipe fully and cut the length required to fit to the base of solid ducting pipe and top of rangehood spigot or adapter, if utilised for use with rangehoods with a 120mm spigot. Secure both ends of the semi-rigid ducting pipe with the ducting tape supplied. If rangehood is a canopy type, fit decorative flue covers in place following installation of ducting.

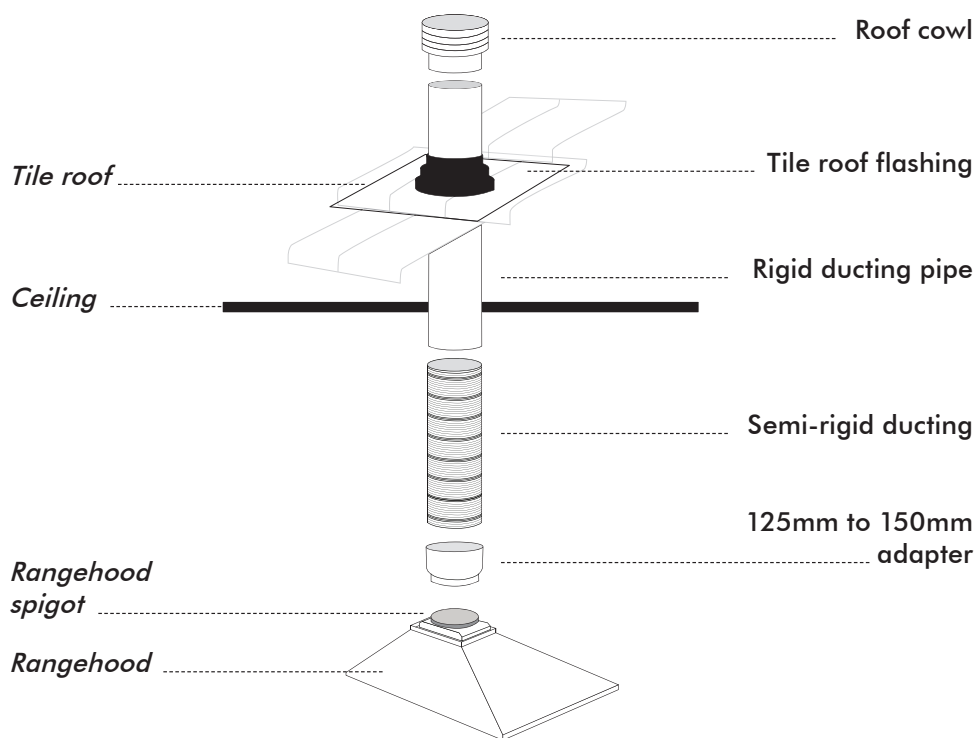

Blank Page

Blank Page



Distributed by:

Home Appliances Pty. Ltd.

20 Carlotta Street, Artarmon NSW 2064

After sales support: 1800 444 357

Fax: 1300 133 279

Email: info@hapl.com.au

VIALPRODUCTS.COM.AU

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.